

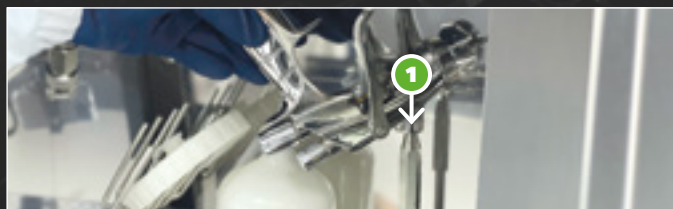


Usage instructions **IN 6 EASY STEPS**


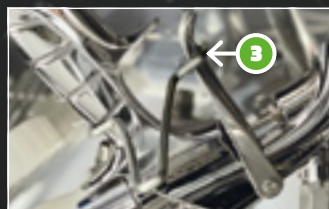


- 1** Turn the spray gun upside down and place the paint inlet on top of the paint channel jet.
Do not unscrew the air cap.

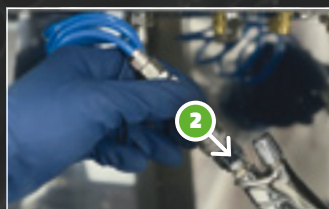

- 2** Connect the compressed air coupling to the air inlet of the spray gun.

- 3** Using the trigger clamp, keep spray gun trigger in open position. Close auto clean compartment door or lid and set timer to 2-3 minutes.

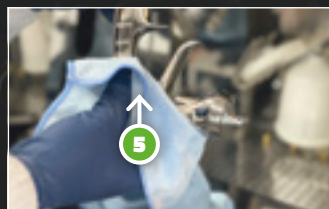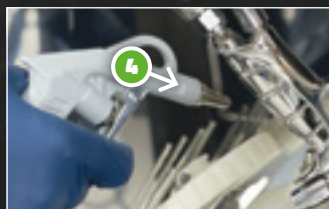

- 4** Remove trigger clamp and with spray gun still in place, blow it dry using the air blow gun. Do not touch the trigger!

- 5** Connect the spray gun to the external compressed air coupling and blow it out into the washer. Wipe the spray gun dry with a microfiber cloth.



- 6** Check the inside of the air cap for moisture and contamination.

During the entire automatic cleaning process, the spray gun **must not be disconnected from the compressed air coupling** and the trigger may only be pulled when the gun is **correctly seated** on the paint channel jet.

Manual cleaning **may only be done with the compressed air coupling connected**, as this is the only place where compressed air flows continuously.

Prior to the next painting cycle, the paint channel and the inside of the air cap must **always be free of cleaning fluid**.

Failure to follow the application instructions may result in **paint problems!**